

- GENERAL NOTES
- MUSEUM STAFF TO MARK PLACEMENT AND DIAMETER OF DRAIN PIT PRIOR TO INSTALLATION.
 - 40 ML EPDM LINER TO BE USED IN DRAIN PIT, TYP.
 - PROVIDE FILTER FABRIC PER NOTES
 - STONE TYPE AND SIZE TBD BY MUSEUM STAFF PRIOR TO INSTALLATION.

- SYMBOLS KEY
- WORK POINT
 - BUILDING SECTION MARKER
 - DETAIL SECTION MARKER
 - DETAIL MARKER
 - BUILDING ELEVATION MARKER
 - INTERIOR ELEVATION MARKER
 - NORTH ARROW




OLDENBURG PLUG INSTALLATION

PLUG LOCATION & DRAIN DETAILS


SHEET TITLE:	
AS NOTED	JES
SCALE:	DRAWN BY:
5.26.10	JES
DATE:	CHECKED BY:
PMA CHARGE LINE:	
FILE:	

1


SHEET NUMBER

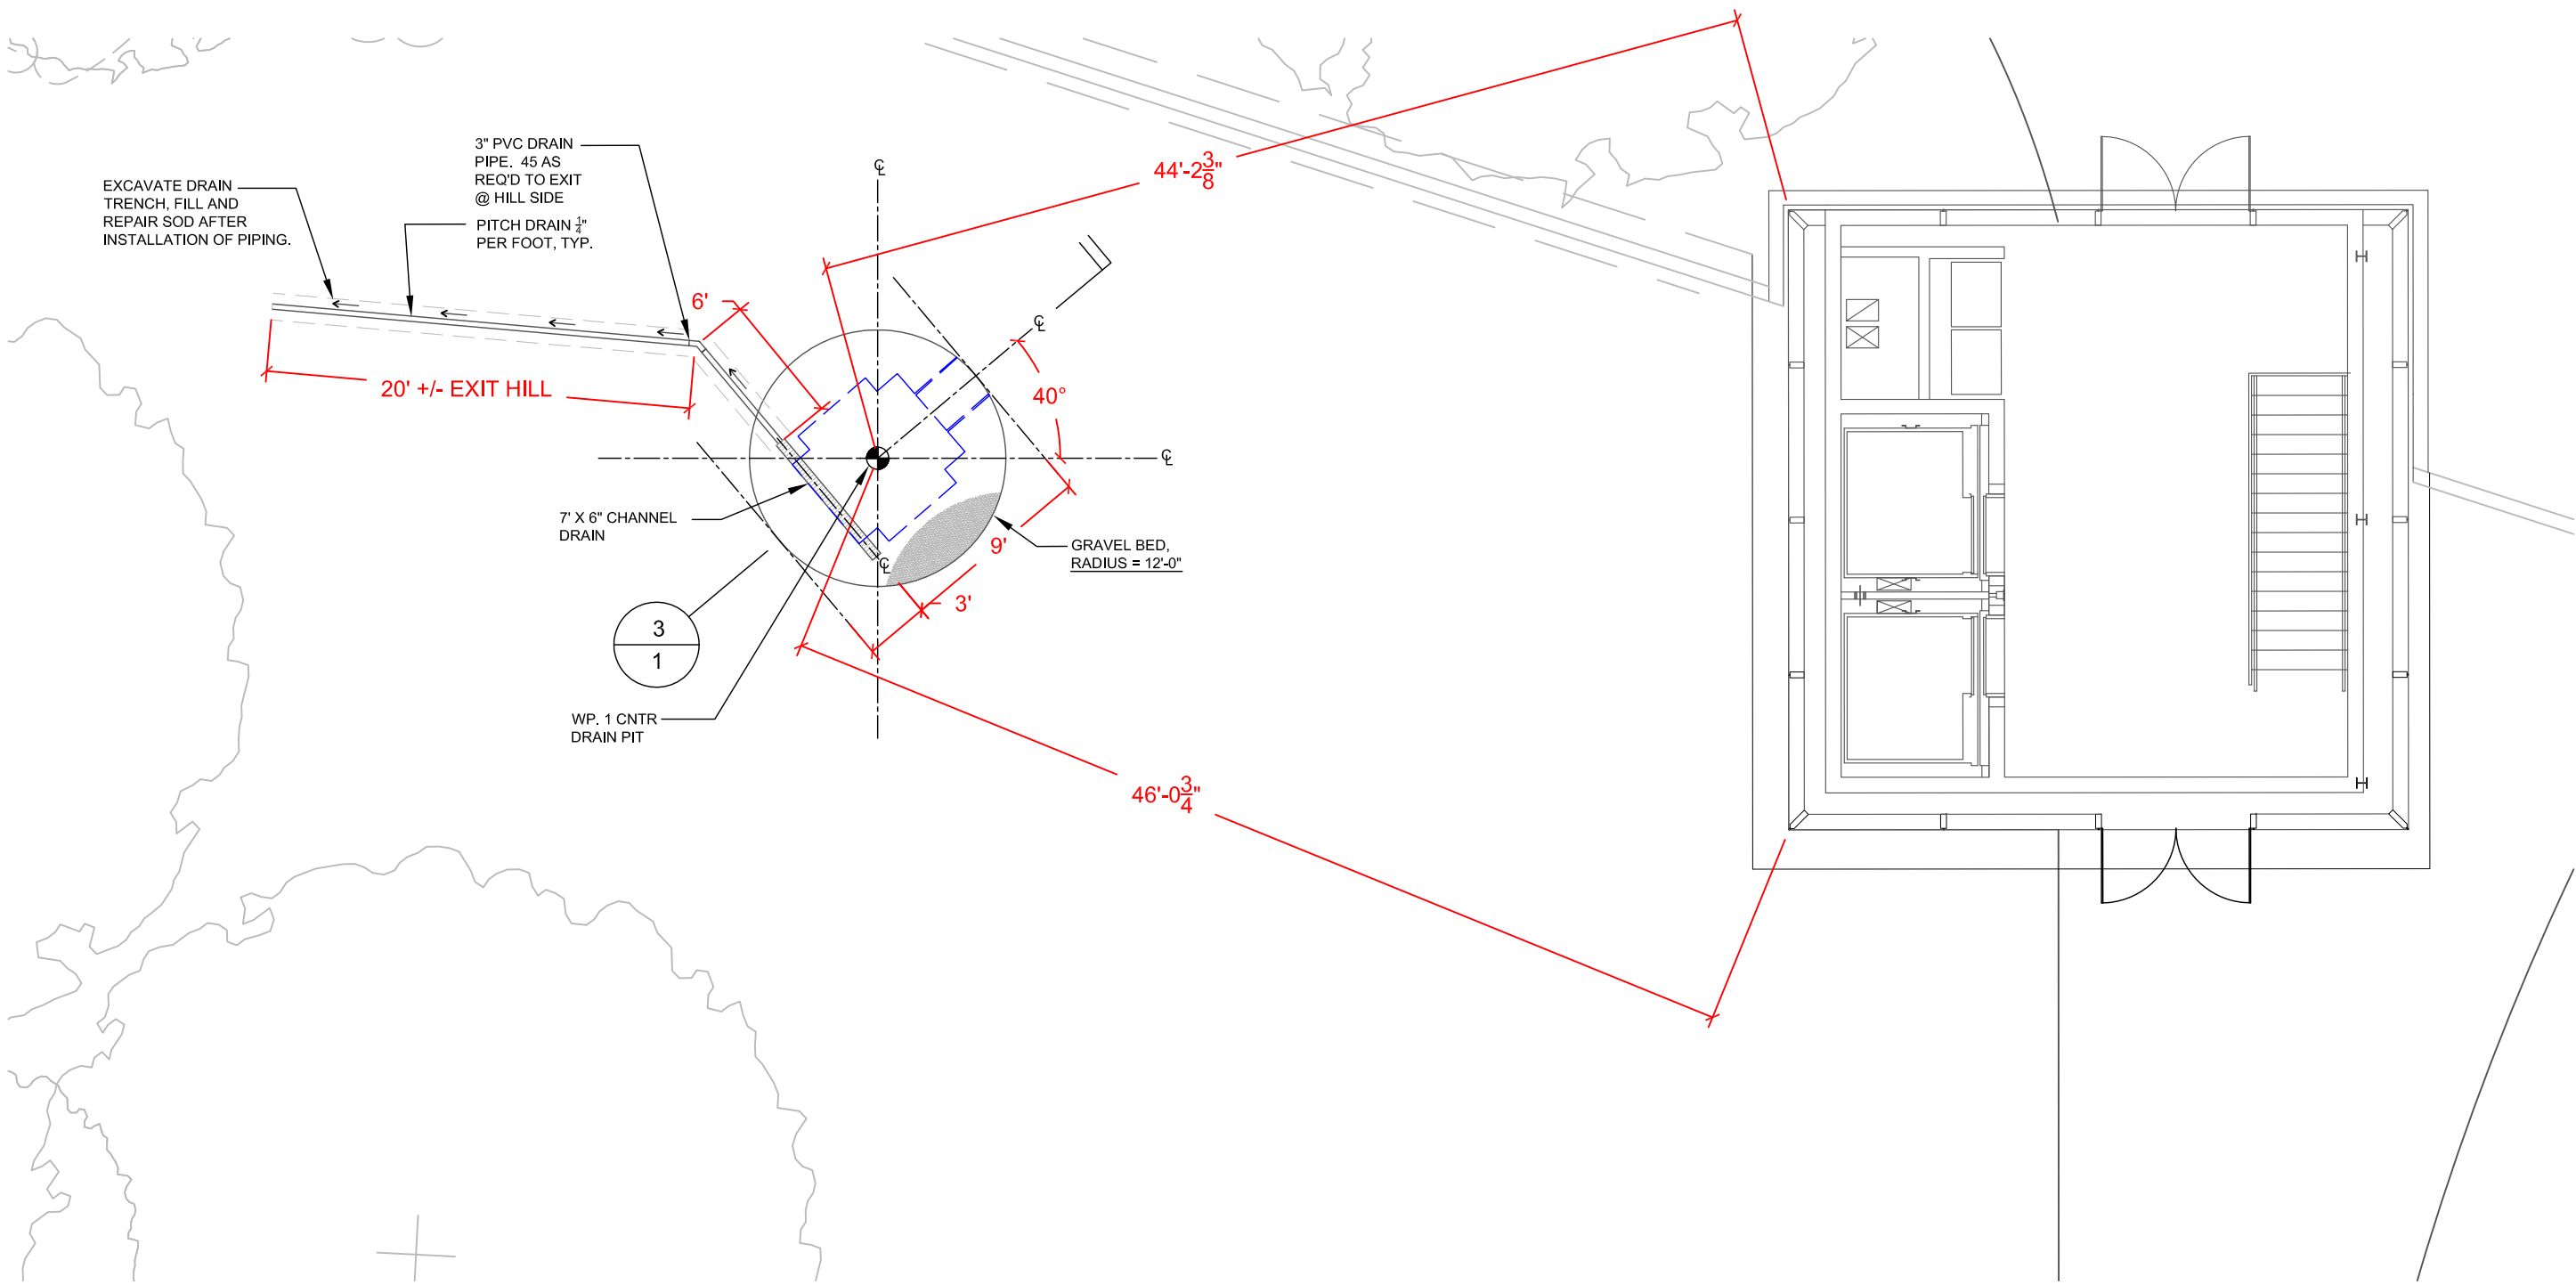

1 PLAN VIEW @ DRAIN PIT
SCALE: 1/2" = 1'-0"

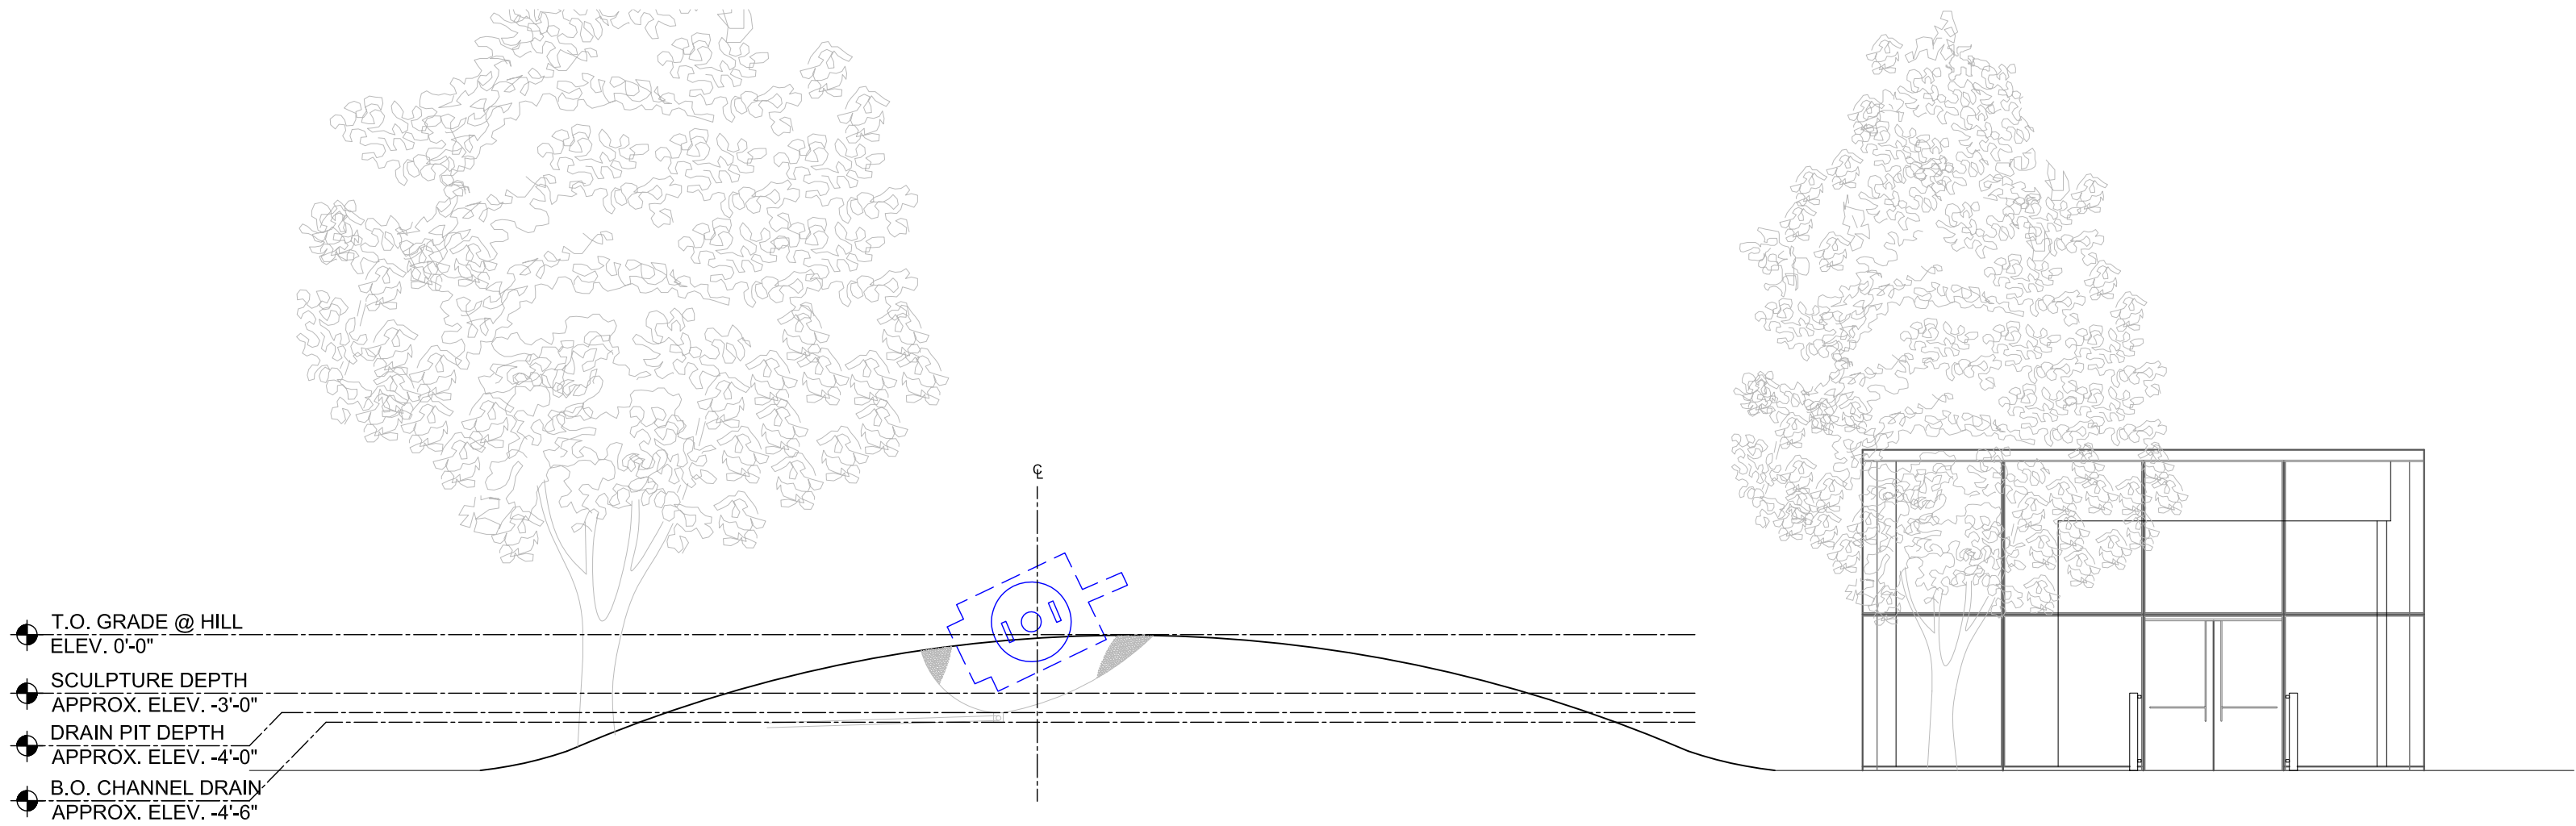

2 ELEVATION LOOKING WEST
SCALE: 1/2" = 1'-0"

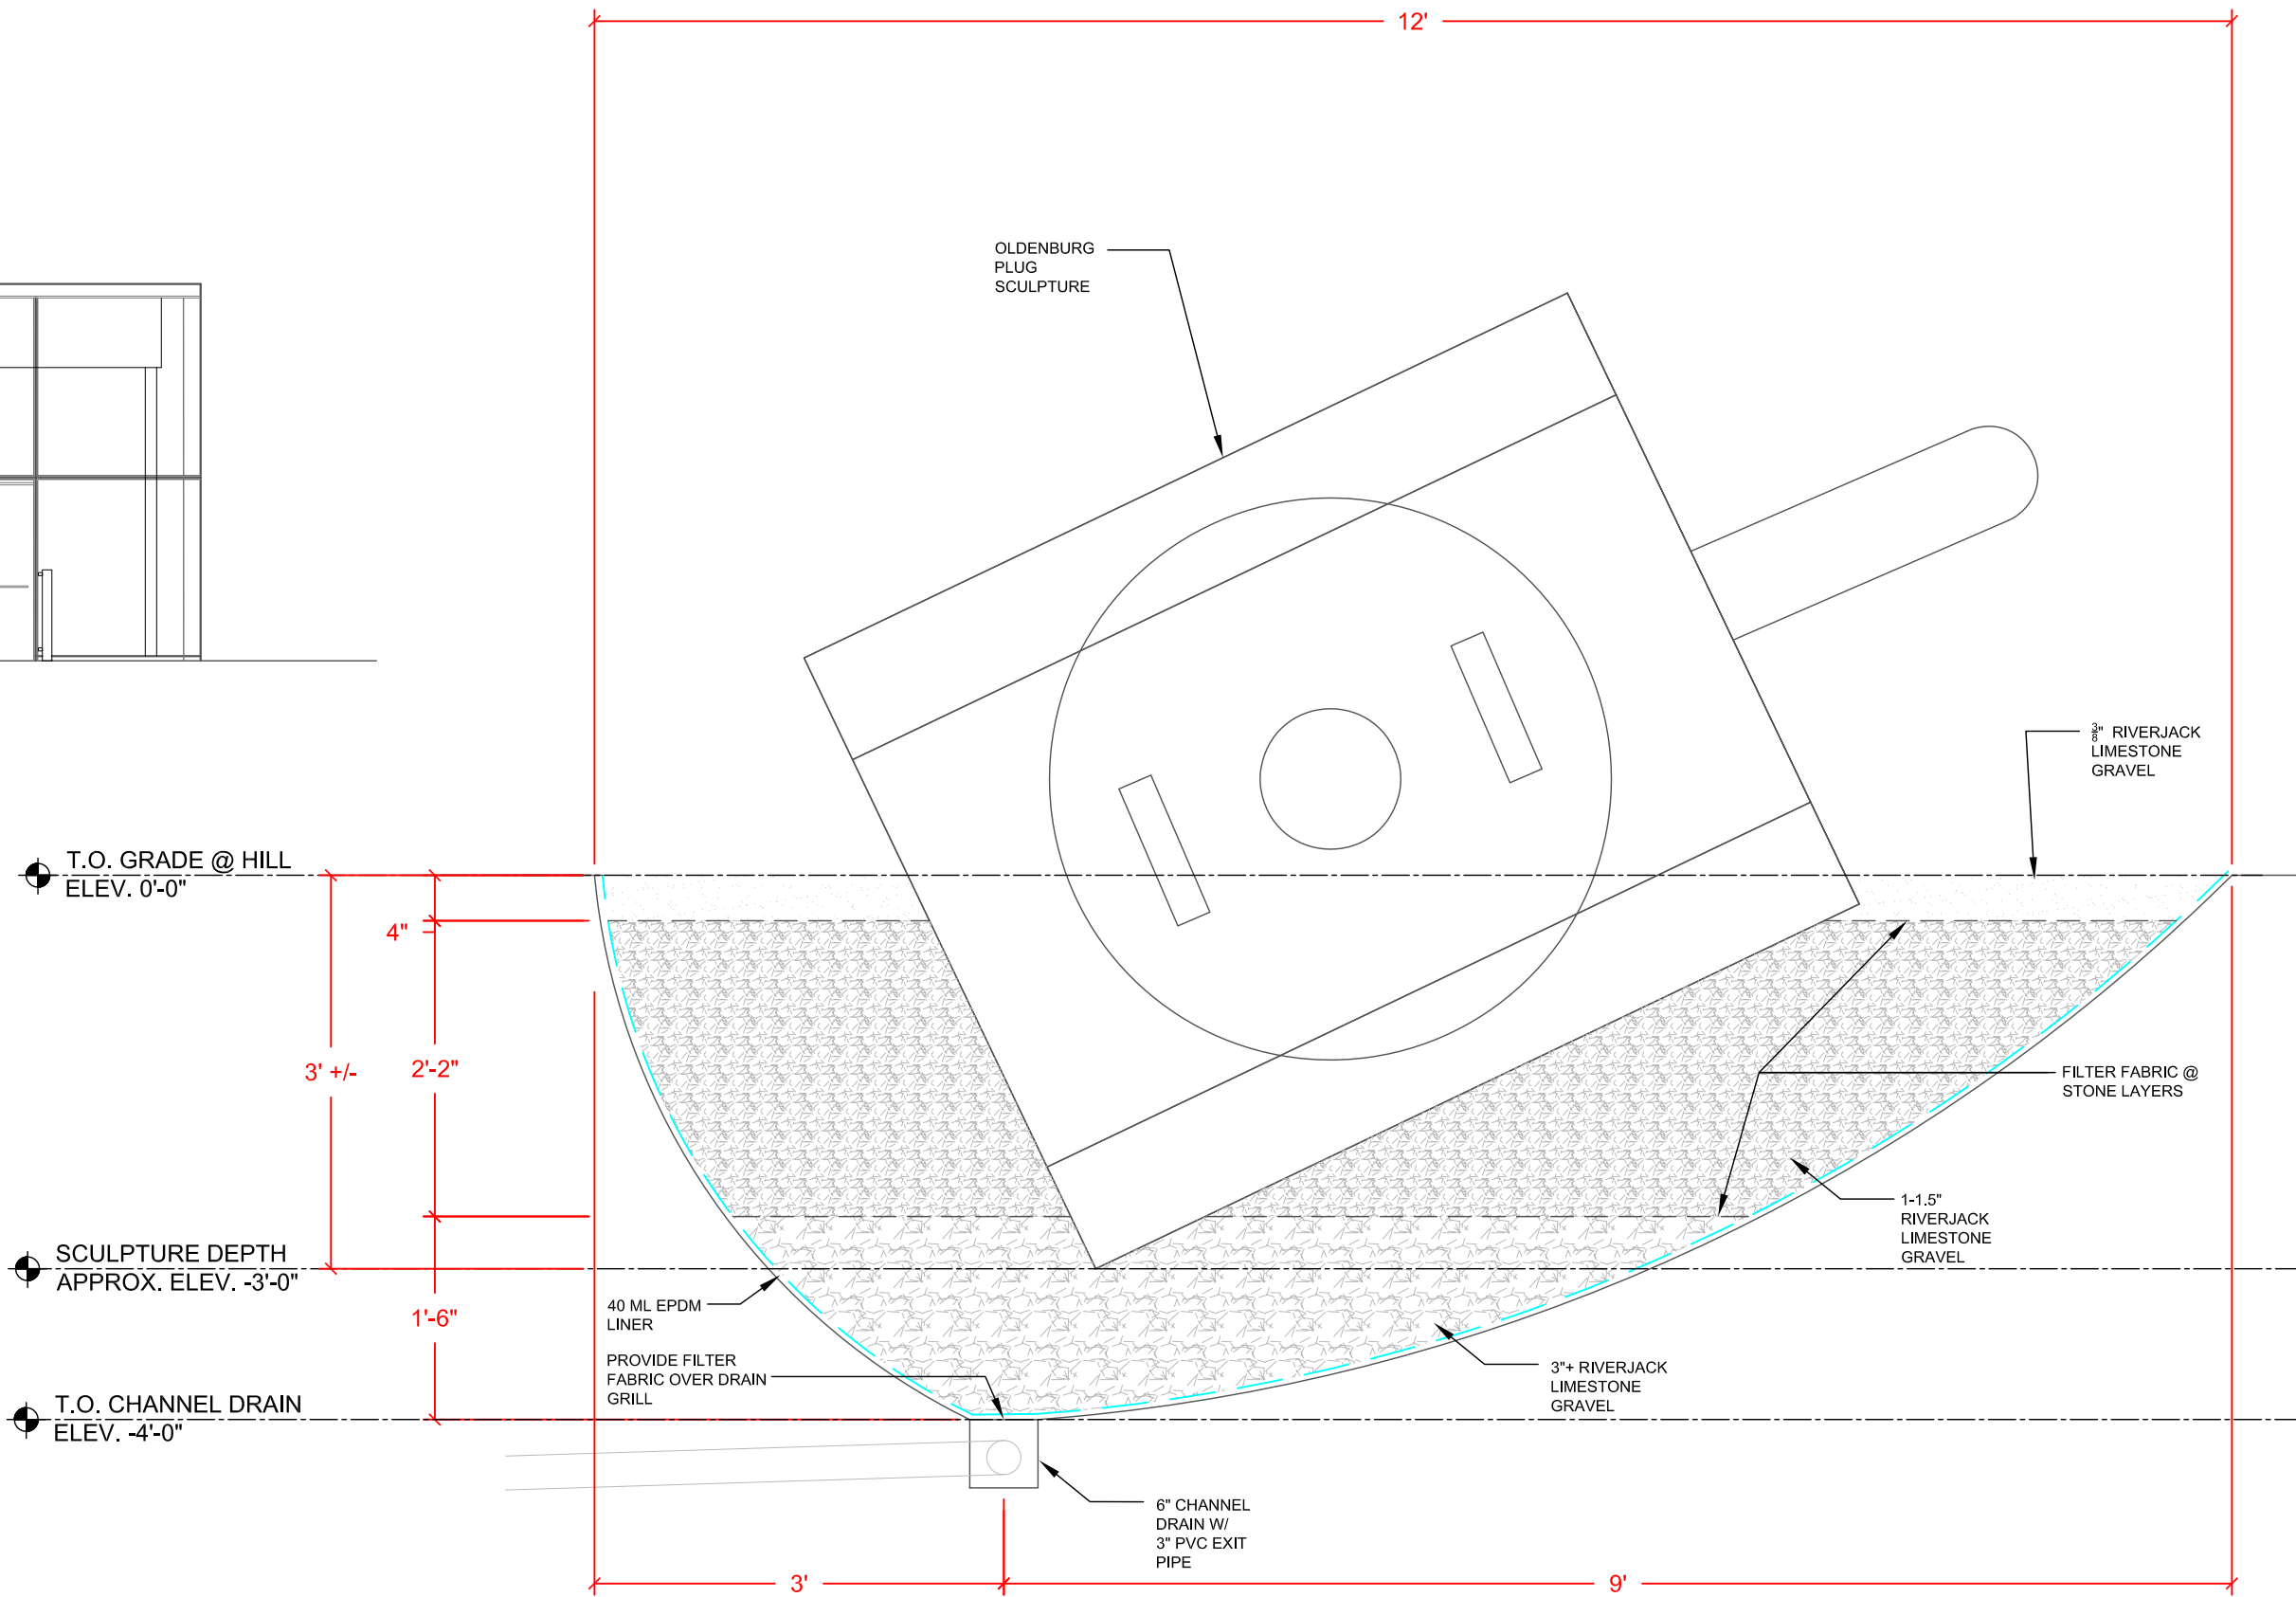

3 SECTION DTL @ DRAIN PIT
SCALE: 1" = 1'-0"

